

Creación y configuración de cuentas SIP

usando el servicio Linphone.org

How to create and configure SIP accounts

using the server Linphone.org

:hardware: CODEC-mixer MX2200

08 - 2023

CREAR CUENTAS SIP

Cualquier servicio SIP se puede utilizar con MX2200. En este instructivo veremos cómo crear una cuenta en el servicio LINPHONE, que es gratuito.

Para establecer la comunicación SIP se requieren al menos DOS cuentas:

- La cuenta SIP para MX2200 es utilizada por el equipo para llamar a un contacto, o
 recibir llamados de otro contacto. Los parámetros de la cuenta se configuran en
 MX2200 por única vez (SIP Account). En el software del Estudio, en cambio, solo se
 agrega la lista de contactos la dirección SIP de la consola.
- La cuenta SIP para el Estudio es configurada en el software del estudio, para recibir o llamar a MX2200. Se configura en una computadora con conexión de audio a la consola de puesta al aire (envío y retorno). En MX2200 solo se agrega a la lista de contactos, la dirección SIP del Estudio.

Para crear una cuenta LINPHONE se procede:

1. Ingresar https://subscribe.linphone.org/



2. Acceder a la opción Create an account

Se puede crear la cuenta asociando una dirección de correo o un número de teléfono. El número de teléfono solo se utiliza para crear la cuenta. No será publicado ni necesario para establecer las llamadas SIP.



3. Ingresar los datos según la opción elegida, acepte los Términos y Condiciones y pulsar **REGISTER**. Los datos de la imagen son a modo de ejemplo.

🕱 Linphone Free SIP Ser 🗴 🔺 MX-2200 - Google Dr 🗴 🚔	SOLIDYNE MX2200 × +	\sim	-	0	×
← → C ☆ 🏻 subscribe.linphone.org/register/ema		Ŀ	☆	🛛 🔇	:
Register using an email Fill a username and an email address, you will th registration process. SIP Username	address nen be able to set a passwo	ord to fir	nish th	ie	
mx2200		@sip.l	inpho	ne.org	
Shoudn't be a phone number. Capital letters are not allowed	d.				
Email	Email confirmation				
solidyne.radio@gmail.com	solidyne.radio@gmail.co	m			
 I would like to subscribe to the newsletter I accept the Terms and Conditions: Read the Terms and Conditions I accept the Privacy policy: Read the Privacy policy 					
No soy un robot	ISTER				

4. La cuenta ya ha sido creada. La siguiente pantalla muestra la información de la cuenta.

Account information

SIP address: sip:mx2200@sip.linphone.org Username: mx2200 Domain: sip.linphone.org

Proxy/registrar address: sip:sip.linphone.org Transport: TLS (recommended), TCP or UDP

CUENTA SIP PARA LA CONSOLA

• Cuando se crea la cuenta para la MX2200 (que usará el equipo para llamar a una cuenta destino) los datos de la cuenta se deberán cargar en la opción SIP ACCOUNT, ya sea desde la pantalla de MX2200 o accediendo al equipo vía IP.

SIP LINK				
	R			-90 -90
	ABLE DISABLED			
SIP ADDRESS	sip:mx2200@sip.linphone.org		REG SERVER	sip:sip.linphone.org
AUTH NAME	mx2200		PASSWORD	mx2200test
REALM	*		PROXY	sip:sip.linphone.org
			CANCE	APPLY

Figura 1: ejemplo de configuración vía web de cuenta SIP en MX2200

• En el Estudio, en cambio, solo se agrega la dirección SIP de MX2200 a la lista de contactos del software Linphone (en el ejemplo, sip:mx2200@sip.linphone.org).

SOBRE LINPHONE EN EL ESTUDIO

- El software Linphone se utiliza para generar y recibir llamadas SIP.
- Es gratuito. Se descarga de https://www.linphone.org/
- Se deberá instalar en una computadora con acceso a Internet y conexión de audio a la consola de emisión.
- Una vez instalado, se configura con la cuenta SIP creada para el estudio. Se deberá ingresar el usuario y la contraseña de la cuenta, el resto de las opciones vienen predeterminadas.

• **MUY IMPORTANTE: Se debe desactivar el cifrado para las llamadas.** En la opción PREFERENCIAS/LLAMADAS Y CHAT elegir **CIFRADO = NINGUNO**.

Ajustes						
Cuentas SIP	🖾 Audio	∐ ‡ Vídeo	🕓 Llamadas y Chat	Red	🚫 Interfaz de Usuario	🙆 Avanzado
Llamadas						
	Cifrado	Ninguno	~		El cifrado es obligatorio	$\bigcirc \bigcirc$
	Auto responder	$\bigcirc \bigcirc$			Retardo (en ms)	0

• En PREFERENCIAS/AUDIO se configuran los dispositivos de audio.

S Ajustes						
Cuentas SIP	⊏ v Audio	☐‡ Vídeo	🕓 Llamadas y Chat	Red	🙆 Interfaz	de Usuario
Parámetros d	le audio					
Dispositivo	de reproducción	WASAPI Ur	nknown: Altavoces (USB /	AUDIO CODEC)	{0.0 ∨	
Ganancia	de reproducción				0	
Dispos	sitivo de entrada	WASAPI Ur	nknown: Línea (USB AUD	IO CODEC){0.0	0.1.000 ∨	
Capt	ura de ganancia				0	
	Nivel de captura					
Dispos	sitivo de llamada	WASAPI Ur	nknown: Altavoces (USB /	AUDIO CODEC)	{0.0 ∨	
	Tono de llamada	\share\sou	nds\linphone/rings/note	s_of_the_optim	istic.mkv	\triangleright
Activar la can	celación de echo	$\bigcirc \bigcirc$	Calibration			

- El dispositivo de reproducción recibe el audio de MX2200.
- El dispositivo de entrada envía el audio de Estudio a MX2200, que se escucha directamente en el circuito de monitoreo (CUE). Es conveniente no enviar a la consola el audio de la propia consola (usar una mezcla diferencia o mix-minus).
- Si no puede enviar a Linphone una mezcla diferencia, activar la opción CANCELACIÓN DE ECHO.

ENLAZAR AL MX2200

- En CONTACTOS/AÑADIR CONTACTO, agregar la dirección SIP de MX2200.
- La conexión se puede establecer desde los Estudios, llamando al MX2200, o bien desde exteriores, llamando desde MX2200 a la cuenta del Estudio.

CREATING SIP ACCOUNTS

Any SIP service can be used with MX2200. In this guide, we will see how to create an account in the LINPHONE service, which is free.

To establish SIP communication, at least TWO accounts are required:

- The SIP account for MX2200. Is used by the mixer to call a contact or receive calls from another contact. The parameters of the account are set in MX2200 only once (SIP Account). At the Studio side, the MX2200's SIP address is required to be added to adress book of Linphone software.
- The SIP account for the Studio. The SIP account for the Studio. It is the SIP account setled in the Linphone software (or other SIP software) to receive calls from or make calls to the MX2200. In the MX2200, this Studio SIP address is added to the SIP address list.

To create a LINPHONE account, proceed as follow:

1. Go to https://subscribe.linphone.org/

😙 Linphone Free SIP Service X 🔺 MX-2200 - Google Drive X + 🗸 V - 🗆 X
← → C ① (subscribe.linphone.org 🗠 ☆) 🛙 (S) :
Linphone Free SIP Service
There are 638,323 users registered with this service.
This service allows you to create a free SIP account on our linphone.org service. Once registered you will be able send instant messages and make audio and video calls to other SIP addresses using any SIP clients. The sip.linphone.org service is powered by Flexisip proxy, deployed in high availability mode. This web portal is based on the Flexisip account manager software.
Create an account Register on our service
Manage your account Get access to your account panel to configure it
Set or recover your password using your Email address or your Phone number
or login using an already authenticated device by flashing a QRcode.

2. Enter to the option *Create an account*

The account can be created associating an e-mail address or a phone number. The phone number is only used to create the account. It not be published and it's not used to make SIP calls.



3. Enter the data according the selected option. Agree the Terms and Conditions and press **REGISTER**. The data shown in the images are only as example.

📀 Linphone Free SIP Ser 🗴 🛕 MX-2200 - Google Dr 🗙 🌐 SOLIDYNE MX2200 🛛 🗙 🕂				C	ב	×
← → C 🏠 🌲 subscribe.linphone.org/register/email		Ė	☆	۵		÷
Register using an email address Fill a username and an email address, you will then be able to set a paregistration process. SIP Username mx2200 Shoudn't be a phone number. Capital letters are not allowed.	sswc	ord to fir @sip.l	nish t inph	he one.	org	
Email Email confirmation solidyne.radio@gmail.com solidyne.radio@gmail.com I would like to subscribe to the newsletter I accept the Terms and Conditions: Read the Terms and Conditions I accept the Privacy policy: I accept the Privacy policy:)	
Read the Privacy policy						

4. The SIP account was created. Next screen show the account information.

Account information

SIP address: sip:mx2200@sip.linphone.org Username: mx2200 Domain: sip.linphone.org

Proxy/registrar address: sip:sip.linphone.org Transport: TLS (recommended), TCP or UDP

SIP ACCOUNT FOR THE MX2200

• When creating the account for MX2200 (which MX2200 will use to call a destination account), the account information should be entered in the SIP ACCOUNT section, either using the MX220's display or by accessing it via IP.

SIP LINK				
	8		-90 -90	
EN	ABLE DISABLED			
SIP ADDRESS	sip:mx2200@sip.linphone.org	REG SERVER	sip:sip.linphone.org	
AUTH NAME	mx2200	PASSWORD	mx2200test	
REALM	*	PROXY	sip:sip.linphone.org	
			APPLY	

Figura 2: ejemplo de configuración vía web de cuenta SIP en MX2200

 On the other hand, at the Studio side the MX200's SIP address is only added as a SIP contact in the Linphone software (in the example: sip:mx2200@sip.linphone.org).

ABOUT LINPHONE AT THE STUDIO

- The software Linphone is used to make and receive SIP calls.
- Linphone is freeware for basic use (<u>https://www.linphone.org/</u>)
- At the Studio, it must be installed on a Windows computer with Internet access and connected to the broadcasting mixer console.
- Once installed, it configures using the SIP account that was created for the Studio. Only the user name and the password are required. All other options are by default.

• VERY IMPORTANT ISSUE: Encryption must be deactivated for calls. In the PREFERENCES/CALLS AND CHAT option, select ENCRYPTION = NONE.

Ajustes						
Cuentas SIP	⊏] ["] Audio	다. Vídeo	🕓 Llamadas y Chat	< Red	🚫 Interfaz de Usuario	🙆 Avanzado
Llamadas						
	Cifrado	Ninguno	~		El cifrado es obligatorio	\bigcirc
	Auto responder	\bigcirc			Retardo (en ms)	0

• In PREFERENCES/AUDIO audio devices are configured.

S Ajustes	
👃 Cuentas SIP 📢 🖓 Audio	🖂 Vídeo 💪 Llamadas y Chat 😪 Red 🧔 Interfaz de Usuario
Parámetros de audio	
Dispositivo de reproducción	WASAPI Unknown: Altavoces (USB AUDIO CODEC){0.0 🗸
Ganancia de reproducción	
Dispositivo de entrada	WASAPI Unknown: Línea (USB AUDIO CODEC){0.0.1.000 🗸
Captura de ganancia	
Nivel de captura	
Dispositivo de llamada	WASAPI Unknown: Altavoces (USB AUDIO CODEC){0.0 🗸
Tono de llamada	\share\sounds\linphone/rings/notes_of_the_optimistic.mkv
Activar la cancelación de echo	Calibration

- The playback device receives audio from MX2200.
- The input device sends Studio audio to MX2200, which is directly heard in the headphones (CUE). It's advisable not to send the MX2200's audio back to itself (use a difference mix or mix-minus).
- If unable to send a mix-minus to Linphone software, enable the ECHO CANCELLATION option in the previous screen.

LINKING TO MX2200

- In CONTACTS/ADD CONTACT, enter the SIP address that was created for MX2200.
- The connection can be established from the Studios by calling MX2200 or from the location by calling from MX2200 to the Studio's SIP contact.